

09I090809

重要度

[B]

A

产品名称：出口冰箱说明书

B

产品型号：SRD-265WT

C

D

技术要求：

- 1 页面规格297mm*210mm（展开）；
- 2 印刷颜色应均匀，且无毛边；
- 3 图案和文字清晰、规范；
- 4 说明书共16页（含封面、封底），8张图纸，正反两面印刷；
- 5 须经开发部确认才能批量印刷。

借(通)用件登记

旧底图总号

底图总号

出图审查

日期

1	冰箱说明书	B2073-006-2248	说明书详细内容详见附件
---	-------	----------------	-------------

序号	名称	物料号	备注
----	----	-----	----

序号	图号	名称	数量	材料	备注
				纸张: 80g 胶版纸	创维电器
					说明书
					B08060160

标记	处数	分区	更改文件号	签名	年、月、日	阶段标记	版本	重量	比例
设计							A		1:1
审核						共 1 张	第 1 张		
模块审核						图形识别符号			
工艺									

A

B

C

D

E

F

AKIRA

Household Electrical Appliances Refrigerator

———— SRD 00320

WARNING

- 1.)The appliance has to be unplugged after use and before carrying out user maintenance on the appliance.
- 2.)This appliance is not intended for use by persons(including children) with reduced physical ,sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 3.)Children should be supervised to ensure that they do not play with the appliance.
- 4.)If the supply cord is damaged, it must be replaced by manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- 5.)Save these instructions and be sure that they remain with the appliance if it is moved or sold, so that anyone, using it throughout its life, will be properly informed on usage and safety notices.
- 6.)Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommend by the manufacturer.
- 7.)Do not damage the refrigerant circuit.
- 8.)Do not use electrical appliances inside the food storage

REFRIGERATOR

If the refrigerant circuit should be damaged:
Avoid opening flames and sources of ignition.
Thoroughly ventilate the room in which the appliance is situated.
It is dangerous to modify this produce in any way.

Insurance

**! Any warranty provided with this product does not cover loss of !
fridge/freezer content.**

Any claim for loss, damage, costs or expenses of an indirect or consequential nature including any economic loss or damage to foodstuffs or any other goods is excluded. We recommend that you inspect your fridge/freezer regularly to check that it is working correctly, losses can result from deterioration following breakdown or accidental failure of the appliance, fuses, plugs or public electricity supply, these can be covered by your standard home insurance or might require extra cover. Check with your insurance provider.

Important Note:

This appliance is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

The symbol on the product, or on the documents accompanying the product, the Crossed Out Wheelie Bin, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this product, please contact your local authority, your household waste disposal service or the retailer where you purchased the product.



We continuously try to improve our products for the benefit of our customers. For this reason we reserve the right to make changes to any product at any time, without notice.

Specification, picture and feature are subject to change without prior notice for purpose of product improvement.

CONTENTS

Safety Precaution

Parts

Placement

Operation Check

Food Storer

 
Maintenance

Trouble Shooting


SAFETY PRECAUTION

Please always follow the safety hint listed below:


The power supply for the unit should be exactly the same as described on the

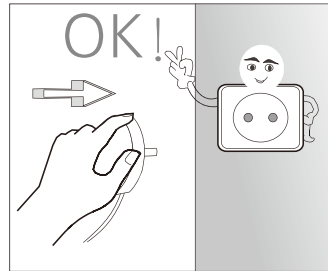

 
The unit should be operated in the absence of flammable or explosive

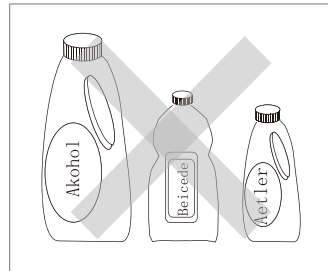

Please unplug the unit first when you

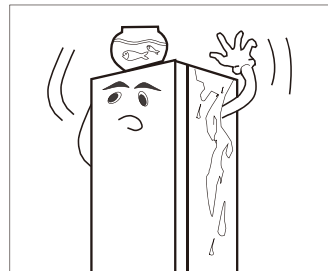 

 Please unplug the unit immediately if you find any abnormal smell or smoke, and

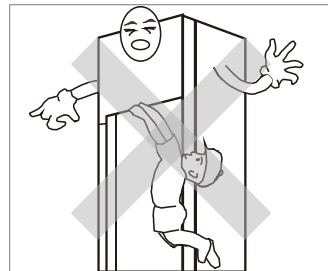

Hanging or sitting on the door is very dangerous, it may overturn the unit and

Problem	Possible cause & Solution
A layer of frost occurs in the compartment	Check that the air outlets are not blocked by food and ensure food is placed within the appliance to allow sufficient ventilation. Ensure that door is fully closed. To remove the frost, please refer to cleaning and care chapter.
Temperature inside is too warm	You may have left the doors open too long or too frequently; or the doors are kept open by some obstacle; or the appliance is located with insufficient clearance at the sides, back and top
Temperature inside is too cold	Increase the temperature by following the "Display controls" chapter.
Doors cant be closed easily	Check whether the top of the refrigerator is tilted back by 10-15mm to allow the doors to self close, or if something inside is preventing the doors from closing.
Water drips on the floor	The water pan (located at the rear bottom of the cabinet) may not be properly leveled, or the draining spout (located underneath the top of the compressor depot) may not be properly positioned to direct water into this pan, or the water spout is blocked. You may need to pull the refrigerator away from the wall to check the pan and spout.
The light is not working	<ul style="list-style-type: none"> ●The LED light may be damaged. Refer to replace LED lights in cleaning and care chapter. ●The control system has disabled the lights due to the door being kept open too long, close and reopens the door to reactivate the lights.

FAULT DISPLAY

Fault display shows as following under Fault mode:

FAULT MODE	FAULT DISPLAY
Ref sensor Fault	Indicator 1 shines
Room sensor Fault	Indicator 2 shines
Trans-temp sensor Fault	Indicator 3 shines
No-frost sensor Fault	Indicator 4 shines
Freezer sensor Fault	Indicator 5 shines
Correspondence Fault	Both Indicator 1&2 shine
Fan Faul	Both Indicator 1&3 shine

The LED bead from control panel shines at 1 HZ under fault mode, when closing door, the lamp is off and when opening door, the lamp is on. Once the control panel fails to examine the fault, the lamp will stop shining right away.


TROUBLE SHOOTING:

If you experience a problem with your appliance or are concerned that the appliance is not functioning correctly, you can carry out some easy checks before calling for service, please see below. You can carry out some easy checks according to this section before calling for service.

Problem	Possible cause & Solution
Appliance is not working correctly	Check whether the power cord is plugged into the power outlet properly.
	Check the fuse or circuit of your power supply, replace if necessary.
	The ambient temperature is too low. Try setting the chamber temperature to a colder level to solve this problem.
	It is normal that the freezer is not operating during the automatic defrost cycle, or for a short time after the appliance is switched on to protect the compressor.
Odours from the compartments	The interior may need to be cleaned
	Some food, containers or wrapping cause odours.
Noise from the appliance	The sounds below are quite normal: <ul style="list-style-type: none"> ●Compressor running noises. ●Air movement noise from the small fan motor in the freezer compartment or other compartments. ●Gurgling sound similar to water boiling. ●Popping noise during automatic defrosting. ●Clicking noise before the compressor starts.
	Other unusual noises are due to the reasons below and may need you to check and take action: <ul style="list-style-type: none"> The cabinet is not level. The back of appliance touches the wall. Bottles or containers fallen or
The motor runs continuously	It is normal to frequently hear the sound of the motor, it will need to run more when in following circumstances: <ul style="list-style-type: none"> ● Temperature setting is set colder than necessary ● Large quantity of warm food has recently been stored within the appliance. ●The temperature outside the appliance is too high. ●Doors are kept open too long or too often. ●After your installing the appliance or it has been switched off for a long time.


PARTS

 Due to the production's improvement, the unit you purchased

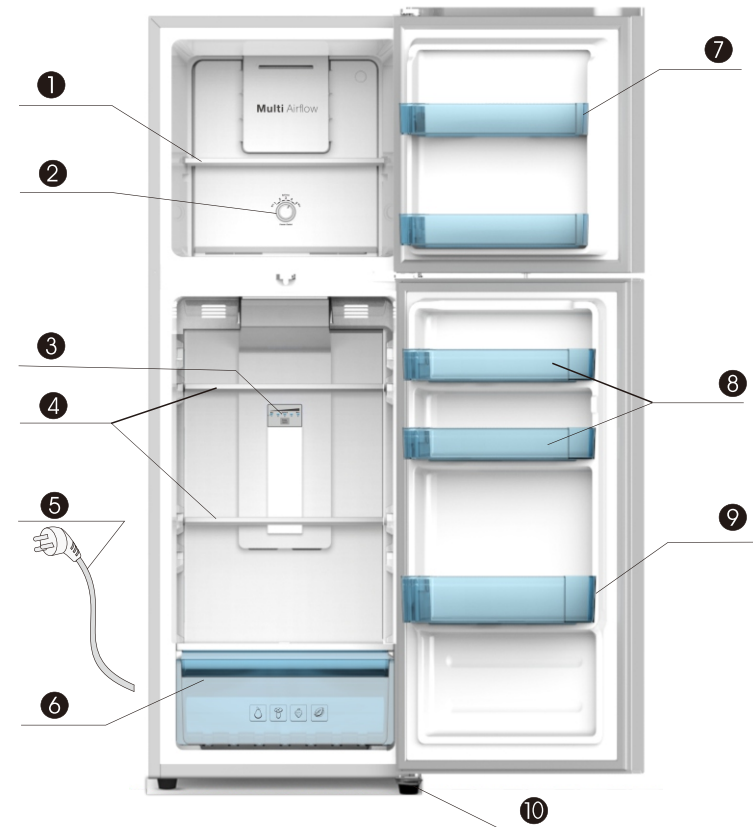


- 1** Freezer Shelf **2** Freezer Temperature Control Knob **3** Refrigerator Temperature Control Knob **4** Shelf Regulator
5 Power Plug **6** Crisper **7** Freezer Door Rack **8** Refrigerator Door Rack
9 Bottle Rack **10** Adjustable Feet

 PLACEMENT

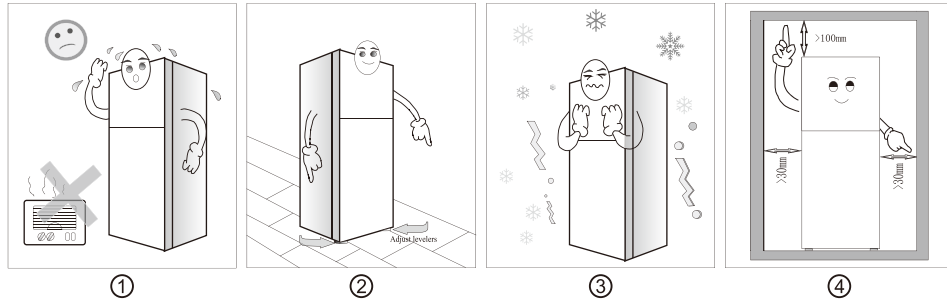

- ① The unit should be placed in a ventilated and dry environment. Do not put the unit in direct sunshine, and keep it as far as possible from heat sources.
- ② possible from heat sources.
- ③ The unit should be placed on flat and steady ground. Keep the unit level by adjusting the front leg levelers.
- ④

 Door Handle Install illumination

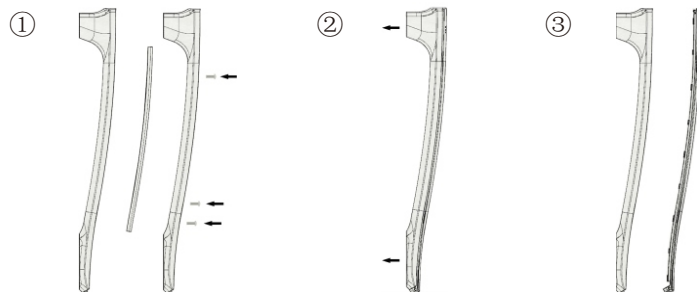

1. Use the screw to fix the iron liner on the lower down cover.
2. Use the screw to fix the lower down cover on the door plate.
3. Install the handle cover on the lower down cover.

 
MAINTENANCE

CLEANING

Always unplug the unit before cleaning.

The unit should be cleaned frequently both inside and outside using water and a little neutral detergent.


Never use boiling water, harsh cleaning agents, acid, alkali or benzene etc.

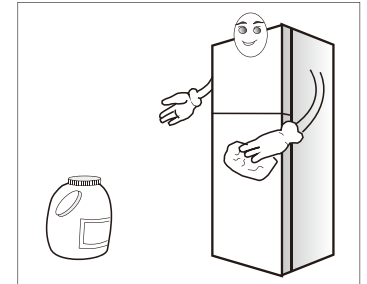

WATER PAN CLEANING

The water pan is located in the back of cabinet. Its function is to collect and evaporate the defrost water.

 Usually it doesn't need special care, but if you find some water overflow or odd smell, it may need to be checked and


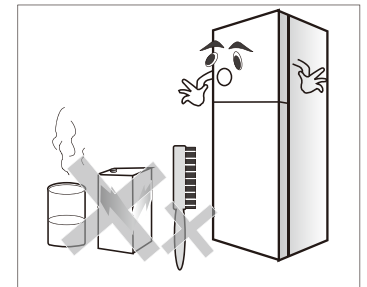


LEAVING THE UNIT SWITCHED OFF

If the unit will be switched off for a long time, the plug should be pulled out, the


REPLACING THE LED LIGHT

  Warning: The LED light must not be replaced by the user! If the LED light is damaged, contact the customer helping for assistance. To replace the LED light, the below steps can be followed:

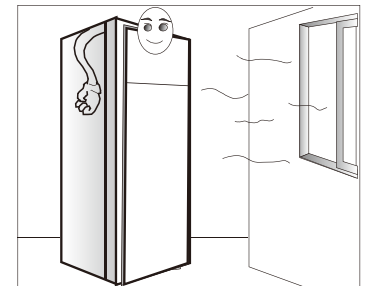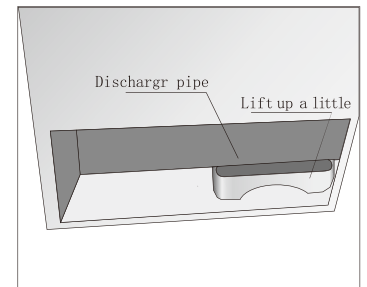

FROZEN FOOD STORAGE


 
The temperature of the freezer is colder than -18°C . It is to store food to be kept for a long period.

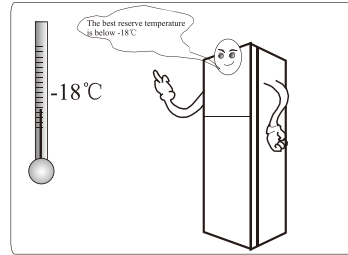

Any hot food must be cooled down to room temperature before it is put into the freezer.


Please don't put glass containers filled with liquid into the freezer compartment as the glass may break.

  It is better to presort the foods before putting them into the freezer. Put the same kinds of food together to help to minimize the time to

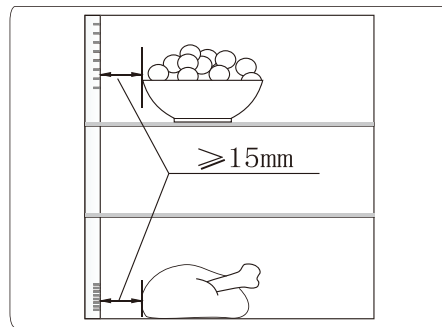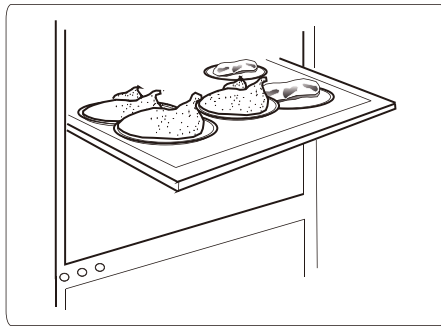


OPERATION CHECK

 
Make sure the unit has been placed properly and all

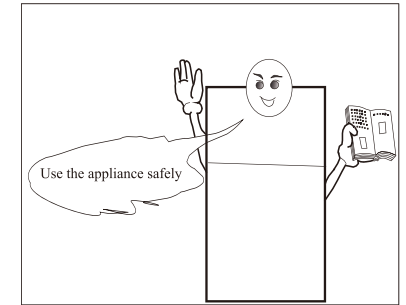

 Adjust the control knob to the middle position, and then plug in

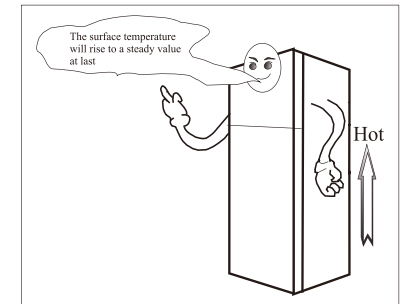

 30 minutes later, open the freezer compartment door, feel the cold air, that means the unit works properly. After a period of time the

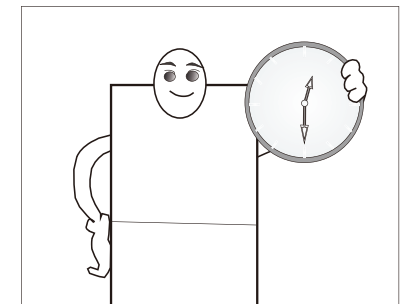


CONTROL PANEL

Use your appliance according to the following control regulations,

Insufficient refrigerator in the chamber: Set the temperature

Important!

 High ambient temperatures(e.g on hot summer days) and colder setting on the temperature regulator can cause the compressor to run continuously or even non-stop!

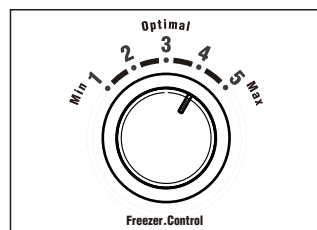

Temperature regulator in the freezer chamber

The temperature regulator allows you to regulate the temperature inside the Freezer.

 
in case of too much frozen food or ice making in chamber.

please set the temperature control knob at “Colder” position.

In case of using the refrigerator in usual condition. Please set the temperature regulator at the middle position.

Important!

The air volume of frozen and refrigerated room will be adjusted by sliding the block left or right, as so to adjust the temperature of frozen and refrigerated room.

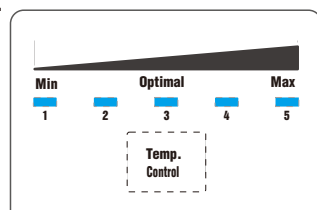


So we do not advise the user set the

Important!

Don't place too much food directly against the air outlet of the temperature sensor part in Wind channel cover of the refrigerator


Important!

 If the 4-star and 2-star are labeled inside the upper door, then the freezer

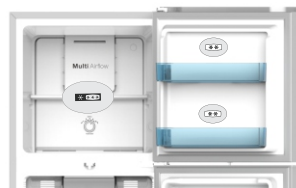

FOOD STORAGE

 
The temperature in the fresh compartment is between 0~10°C, although this lower temperature can limit

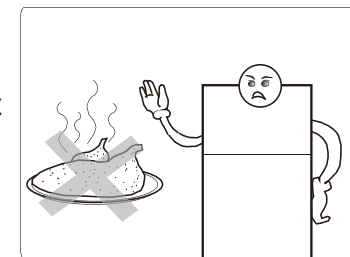

FRESH FOOD STORAGE

Cooked food should be cooled down to room temperature before putting into the refrigerator.

 It is better to put the food in a sealed bag before placing into the

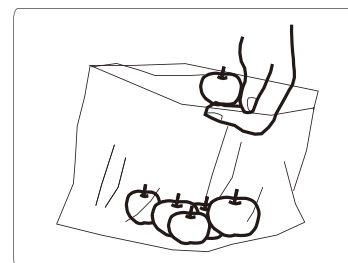

CONTROL KNOB

Is used to adjust the temperature of different compartment. User

User can adjust the temperature of cooling by turn-control knob located at the back of the cooling zone cabinet. According to the above picture. the knob is used for controlling temperature of

